

# © CONTENTS ©

## Chapter 1. INTRODUCTION

<b>1.1 Features</b> .....	<b>1-1</b>
<b>1.2 Glossary</b> .....	<b>1-1</b>
1.2.1 A-Analog Value .....	1-1
1.2.2 D-Digital Value .....	1-1
1.2.3 Analog / Digital Conversion Characteristics .....	1-2

## Chapter 2. SPECIFICATIONS

<b>2.1 General Specifications</b> .....	<b>2-1</b>
<b>2.2 Performance Specifications</b> .....	<b>2-2</b>
<b>2.3 Names of Parts and Functions</b> .....	<b>2-3</b>
<b>2.4 I/O Conversion Characteristics</b> .....	<b>2-4</b>
2.4.1 Voltage Input Characteristics .....	2-4
2.4.2 Current Input Characteristics .....	2-5
2.4.3 Simultaneous Voltage and Current Input Characteristics .....	2-5
2.4.4 Analog Input and Digital output Characteristics .....	2-6
<b>2.5 Averaging Process</b> .....	<b>2-6</b>

## Chapter 3. INSTALLATION AND WIRING

<b>3.1 Installation</b> .....	<b>3-1</b>
3.1.1 Installation Ambience .....	3-1
3.1.2 Handling Precautions .....	3-1
<b>3.2 Wiring</b> .....	<b>3-2</b>
3.2.1 Wiring Precautions .....	3-2
3.2.2 Wiring Examples .....	3-2

## Chapter 4. FUNCTION BLOCK

<b>4.1</b>	<b>Insertion of the Function Block for the A/D Conversion Module on the GMWIN</b>	<b>4-1</b>
<b>4.2</b>	<b>Local Function Block</b>	<b>4-2</b>
4.2.1	Module Initialization (AD2INI)	4-2
4.2.2	Module Reading - Array Type (AD2ARD)	4-3
4.2.3	Module Reading - Single Type (AD2RD)	4-3
<b>4.3</b>	<b>Errors on Function Block</b>	<b>4-4</b>

## Chapter 5. PROGRAMMING

<b>5.1</b>	<b>Programming for Distinction of A/D Conversion Value</b>	<b>5-1</b>
<b>5.2</b>	<b>Programming for Display of A/D Conversion Value and Error Code on BCD Display...</b>	<b>5-5</b>

## Chapter 6. DIMENSIONS

<b>6.1</b>	<b>G6F-AD2A</b>	<b>6-1</b>
------------	-----------------	------------