


LG Programmable Logic Controller

Ethernet I/F Module

***GLOFA-GM***    **G3L-EUEA**  
**G4L-EUEA**

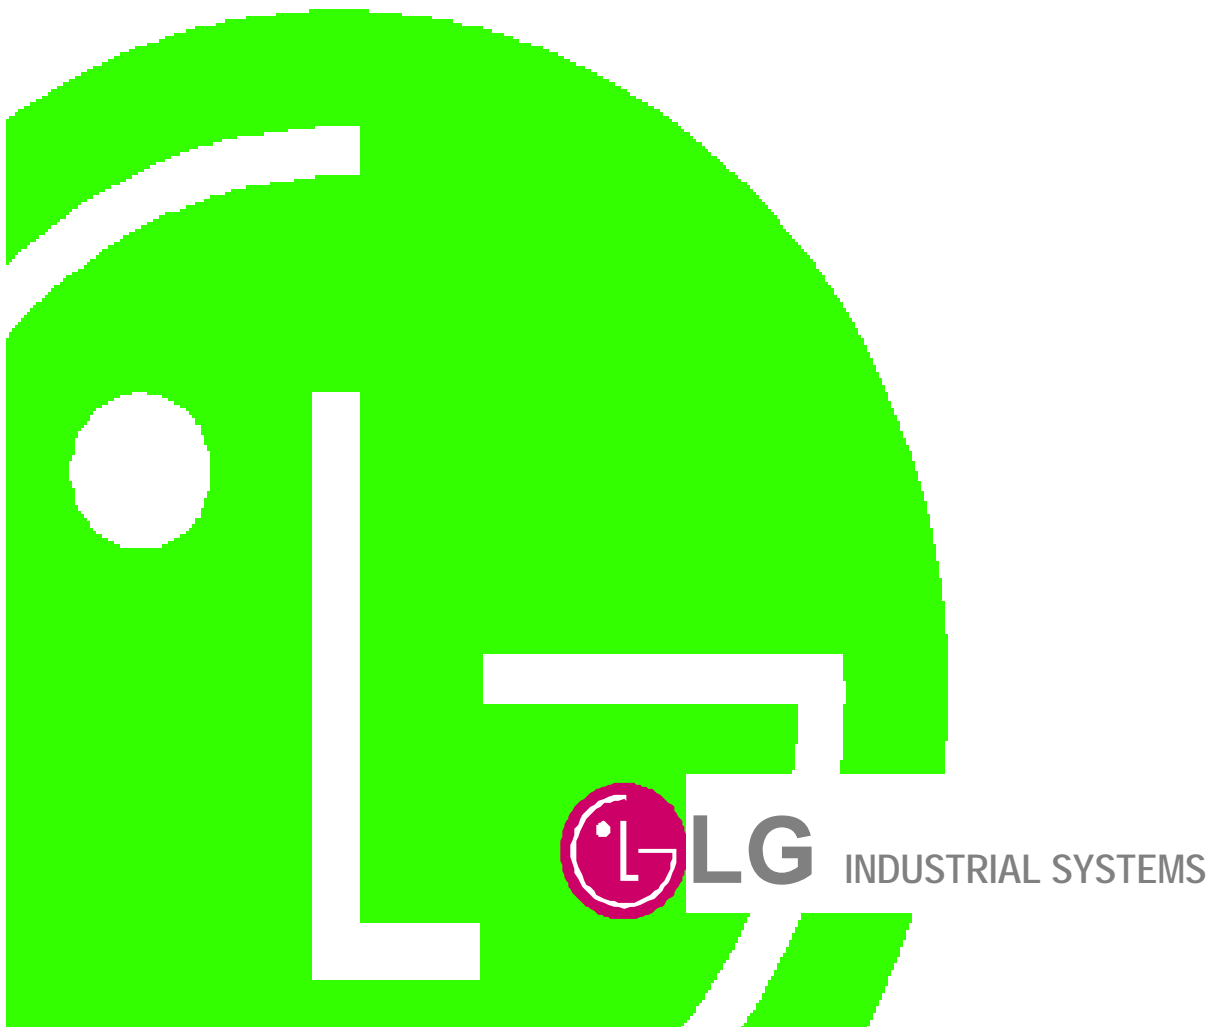

This user's manual describes functions of Cnet I/F module.  
Please read this manual carefully to understand the functions thoroughly prior to system design.

**Revision record**

Revision record	Date of issue revised	Contents revised

## Contents

<b>Chapter 1 Introduction</b> .....	<b>1-1-1-2</b>
1.1 Matter that demand special attention when using .....	1-2
<b>Chapter 2 Definition of Terminology</b> .....	<b>2-1-2-4</b>
<b>Chapter 3 General Specification</b> .....	<b>3-1-3-5</b>
3 . 1     G e n e r a l     S p e c i f i c a t i o n .....	3-1
3 . 2     S t r u c t u r e     a n d     C o m p o n e n t .....	3-3
3 . 2 . 1     T h e     S t r u c t u r e     o f     G 3 L - E U E A .....	3-3
3 . 2 . 2     T h e     S t r u c t u r e     o f     G 4 L - E U E A .....	3-5
<b>Chapter 4 Performance Specification</b> .....	<b>4-1-4-</b>
<b>2</b>	
4 . 1     P e r f o r m a n c e     S p e c i f i c a t i o n .....	4-1
4 . 2     C a b l e     S p e c i f i c a t i o n .....	4-2
4.2.1 Cable Standards related Ethernet/IEEE 802.3 .....	
4 .....	2
4.2.2 An Example of Twisted-Pair Cable(UTP) of Category 5(CTP-LAN5) .....	
4 .....	2
<b>Chapter 5 System Configuration</b> .....	<b>5-1-5-7</b>
5 . 1     G L O F A     P L C     N e t w o r k     S y s t e m .....	5-1
5 . 2     G L O F A     P L C     E t h e r n e t     N e t w o r k     S y s t e m .....	5-2
5 . 3     G L O F A     P L C     E t h e r n e t     R e d u n d a n c y     S y s t e m .....	5-6

<b>Chapter 6 Communication and Frame Editor</b> .....	<b>6-1~6-8</b>
6 . 1      C o m m u n i c a t i o n   F u n c t i o n .....	6-1
6 . 2      S e t u p      o f      P a r a m e t e r .....	6-3
6 . 2 . 1      F r a m e      E d i t o r .....	6-3
 <b>Chapter 7 High Speed Link</b> .....	 <b>7-1~7-132</b>
7 . 1      I n t r o d u c t i o n .....	7-1
7 . 2      H i g h      S p e e d      L i n k .....	7-2
7.2.1 TX/RX Data Processing of High Speed Link .....	7-2
7.2.2 Operation Order by High Speed Link .....	7-8

7.2.3 Setting High Speed Link Parameter .....			
7	-	1	0
7.2.4 Operation of High Speed Link .....			
7	-	1	8
7.2.5 High Speed Link Information .....			
. . . . .			7 - 2 0
7 . 2 . 6 S p e e d C a l c u l a t i o n o f H i g h S p e e d L i n k			
.....			7-27
7.2.7 An Example of High Speed Link between Enet's .....			
7	-	3	1
7 . 3 H i g h S p e e d L i n k o f R e d u n d a n t S y s t e m			
.....			7-36
7 . 3 . 1 I n t r o d u c t i o n			
.....			7-36
7 . 3 . 2 U s e o f H S _ L i n k			
.....			7-39
7.3.3 Example between Redundant CPU and GM3 for HS_Link .....			
7	-	4	4

**Chapter 8 Function Block .....** **8-1-8-56**

8 . 1 I n t r o d u c t i o n			
.....			8-1
8 . 1 . 1 I n t r o d u c t i o n			
.....			8-1
8 . 1 . 2 K i n d a n d U s e o f F u n c t i o n B l o c k			
.....			8-2
8 . 2 F r a m e S e t t i n g			
.....			8-17
8 . 2 . 1 F r a m e S e t t i n g			
.....			8-17
8 . 3 A p p l i c a t i o n P r o g r a m s			
.....			8-23
8.3.1 Example of Function Block Service between GLOFA Enet's .....			
8	-	2	3
8.3.2 Enet module of other company + PC + GLOFA Enet .....			
8	-	3	3
8 . 4 F u n c t i o n B l o c k S e r v i c e o f R e d u n d a n c y S y s t e m			
.....			8-40

8 . 4 . 1	I n t r o d u c t i o n	8-40
8.4.2	Redundant Function Block Program	4
8	-	4

**Chapter 9 GMWIN Communication ..... 9-1~9-12**

9 . 1	I n t r o d u c t i o n	9-1
9 . 2	G M W I N C o n n e c t i o n	9-2
9.2.1	Remote 1 stage connection (If RS-232C cable used)	9-3
9.2.2	Remote 2 stage connection (If RS-232C cable used)	9-6
9.2.3	Remote 1 stage connection directly from PC connected with Ethernet	8
9	-	1
9.2.4	Remote 2 stage connection directly from PC connected with Ethernet	1

**Chapter 10 Dedicated Communication ..... 10-1~10-28**

1 0 . 1	D e d i c a t e d C o m m u n i c a t i o n	10-1
1 0 . 1 . 1	S y s t e m C o n f i g u r a t i o n	10-1

1 0 . 2	D e s c r i p t i o n	o f	f u n c t i o n s	
.....	.....	.....	.....	10-3
1 0 . 2 . 1	B a s i c	s e t t i n g	o f	f r a m e
.....	.....	.....	.....	10-3
1 0 . 2 . 2	F r a m e	s t r u c t u r e		
.....	.....	.....	.....	10-4
1 0 . 2 . 3	C o m m a n d s	l i s t		
.....	.....	.....	.....	10-6
1 0 . 2 . 4	D a t a	t y p e		
.....	.....	.....	.....	10-6
1 0 . 3	C o m m a n d	e x e c u t i o n		
.....	.....	.....	.....	10-8
10.3.1	Separate Read of direct variables	.....	.....	.....
1	0	-		8
10.3.2	Continual Read of direct variables	.....	.....	.....
1	0	-	1	3
10.3.3	Named variables Read	.....	.....	.....
1	0	-	1	5
10.3.4	Separate Write of direct variables	.....	.....	.....
1	0	-	1	7
10.3.5	Continual Write of direct variables	.....	.....	.....
1	0	-	2	0
10.3.6	Named variables Write	.....	.....	.....
1	0	-	2	2
10.3.7	Status read request (MMI -> PLC)	.....	.....	.....
1	0	-	2	4
<b>Chapter 11</b>	<b>Diagnosis function</b>	.....	.....	<b>11-1~11-3</b>
1 1 . 1	D i a g n o s i s	F u n c t i o n	b y	O n l i n e
.....	.....	.....	.....	11-2
1 1 . 2	D i a g n o s i s	F u n c t i o n	b y	T e s t
.....	.....	.....	.....	11-2
<b>Chapter 12</b>	<b>Installation and Pre-operation</b>	.....	.....	<b>12-1~12-8</b>
1 2 . 1	I n s t a l l a t i o n			
.....	.....	.....	.....	12-1
12.1.1	Precautions for installation	.....	.....	.....
1	2	-		1

12.1.2 Materials necessary for installation .....	1	2	-	1
1 2 . 1 . 3 Installation of 10BASE5 .....				12-2
1 2 . 1 . 4 Installation of 10BASE2 .....				12-3
12.1.5 Installation of 10BASE-T .....	1	2	-	4
1 2 . 2 Pre-operation .....				12-5
12.2.1 Precautions for system configuration .....	1	2	-	5
12.2.2 Checklist prior to pre-operation .....	1	2	-	5
1 2 . 3 Repair and Check .....				12-7
1 2 . 3 . 1 Daily check .....				12-7
1 2 . 3 . 2 Regular check .....				12-8
<b>Chapter 13 Troubleshooting .....</b>				<b>13-1~13-15</b>
1 3 . 1 Abnormal operation .....				13-1



1	3	.	2	T	r	o	u	b	l	e	s	h	o	o	t	i	n	g	13-3
.....																			
13.2.1	Error code E00-01 : H/W error .....																		
1				3															3
13.2.2	Error code E00-02 : Interface error .....																		
1				3															4
13.2.3	Error code E01-01 : Network error .....																		
1				3															5
13.2.4	Error code E02-01 : Interface error with CPU during operation .....																		
1				3															6
13.2.5	Error code E03-01 : HS link parameter error .....																		
1				3															7
13.2.6	Error code E03-02 : HS link operation error .....																		
1				3															8
13.2.7	Error code E03-03 : HS link's Run link contact On unavailable .....																		
1				3															9
13.2.8	Error code E03-04 : HS link trouble contact On .....																		
1				3														1	0
13.2.9	Error code E04-01 : E_CONN function block operation error .....																		
1				3														1	1
13.2.10	Error code E04-02 : TCP_SEND, UDP_SEND FB operation error .....																		
1				3														1	2
13.2.11	Error code E04-03 : TCP_RCV, UDP_RCV FB operation error .....																		
1				3														1	3
13.2.12	Error code E05-01 : GMWIN communication time-out occurred .....																		
1				3														1	4
13.2.13	Error code E05-02 : GMWIN inner communication error .....																		
1				3														1	5

<b>Appendix</b>	.....																	<b>A-1~A-6</b>																				
A 1	L	E	D	d	i	s	p	l	a	y	s	p	e	c	i	f	i	c	a	t	i	o	n	A-1														
.....																																						
A 2	E	x	t	e	r	n	a	l	d	i	m	e	n	s	i	o	n	s	A-2																			
.....																																						
A 3	E	r	r	o	r	C	o	d	e	s	A-4																											
.....																																						
A.3.1	E	r	r	o	r	r	e	c	e	i	v	e	d	f	r	o	m	c	o	m	m	u	n	i	c	a	t	i	o	n	m	o	d	u	l	e	s	A-4
.....																																						

A . 3 . 2   S T A T U S   d i s p l a y e d   o n   C P U  
..... A-5