


Chapter 5 System structure

5.1 System construction using LGIS' s products

You can construct communication system between own Dnet I/F module like following. Even though the system has both master and slave module at the same time You should set one of both module G4L-DUEA, G6L-DUEA as master and others will be operated as slave module. For the purpose of connecting with LG Inverter and PMU(Monitoring device), Dnet I/F module must be attached on the product for communication.

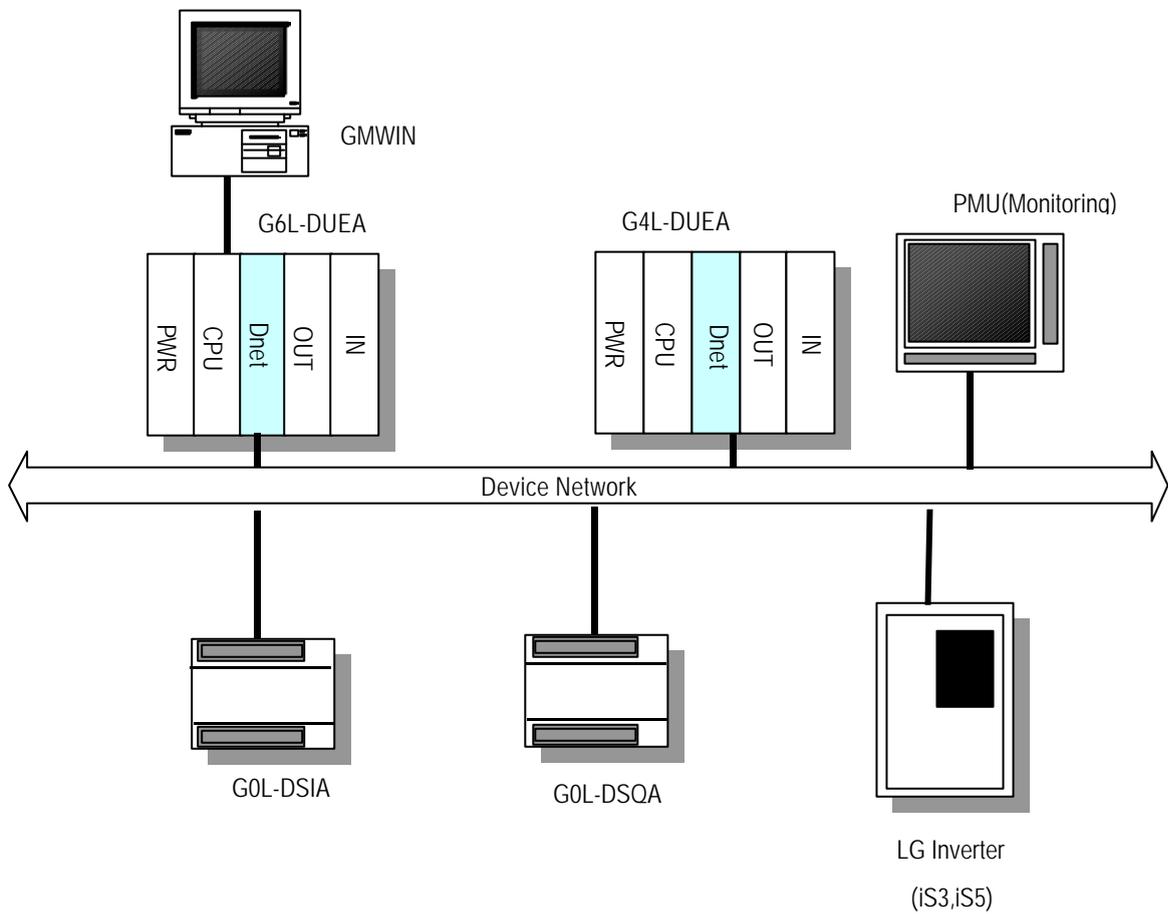

5.2 System construction with mixed LGIS' s and other products

When you are using with other maker' s scanner(master) you should set parameter by Dnet configuration software tool supplied from the maker and set your own G4L-DUEA, G6L-DUEA as slave with using of GMWIN.

